


Step 9 Diagram 10

TO TAKE OFF THE DROPSIDE FROM CRIB

From the crib side where you want to take off the dropside:
loosen the screws **E** with wrench **B** of only one headboard. Do not take off the screws completely.


DIAGRAM 10

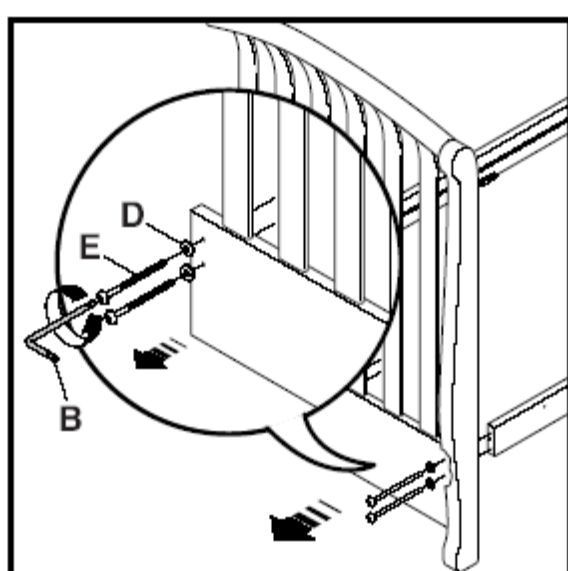

Step 10 Diagram 11

Pull the leg of this headboard towards outside (1). Catch the dropside at the bottom (2) and let the pin of screw **Y** goes out from dropside mechanism.


DIAGRAM 11

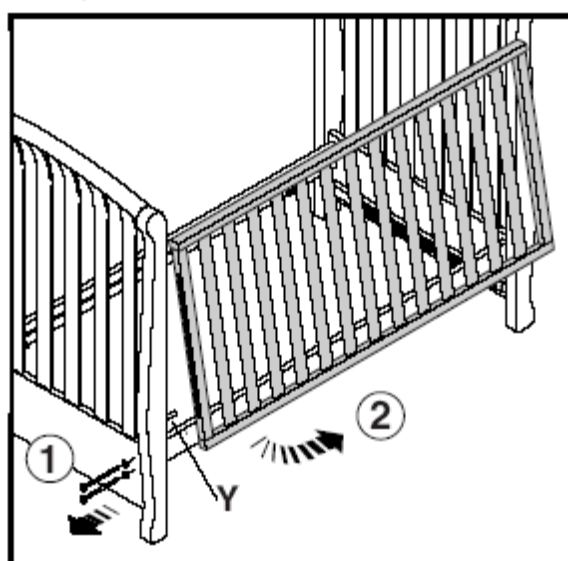

Step 11 Diagram 12

Lift up the dropside (3) and let the screw **X** goes out from dropside mechanism. Take off the dropside (4). Tighten again the screw **E** with the wrench **B** (5).

DIAGRAM 12

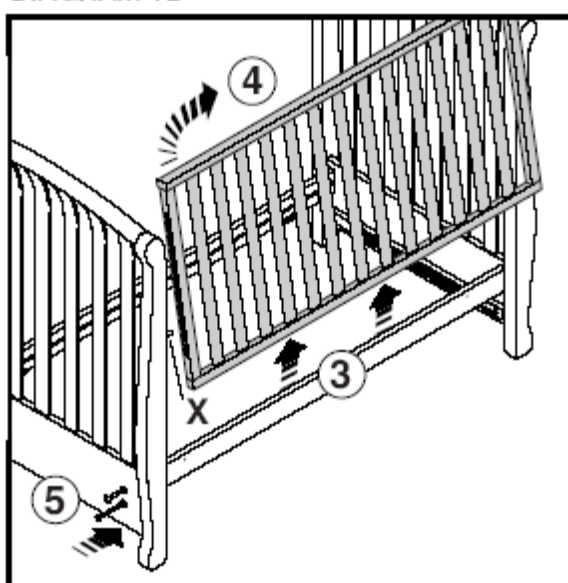


Step 12 Diagram 13

MASKING THE HOLES IN THE LEGS

Use wrench "B" to remove screws **X** and the spanner "Y2" for screw **Y**. Replace the screws with the masking caps **X1** and **Y1** as shown in diagram 12.

DIAGRAM 13

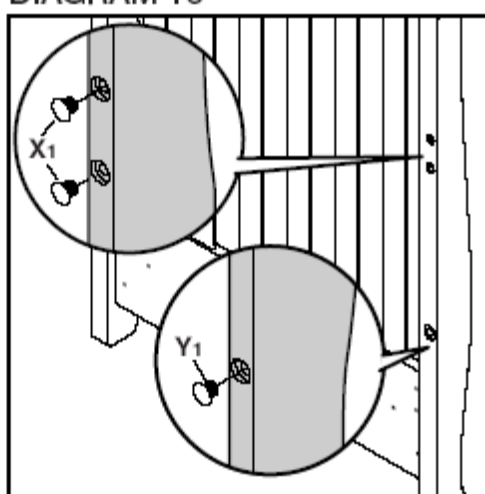


Step 13 Diagram 14

TO FIX SIDE

Raise side until it locks. Use 2 screws **N** to fix side. Tighten screws.

IN ORDER TO INCREASE THE STABILITY OF THE COT AND IMPROVE THE OPERATION OF THE MOVABLE SIDE, IT IS ADVISABLE TO SECURE THE OTHER SIDE USING SCREWS.

DIAGRAM 14

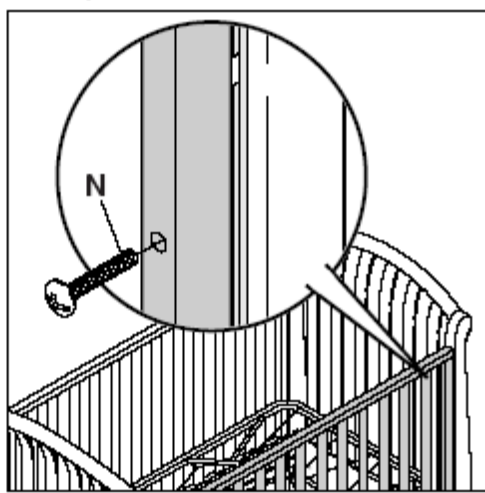


Step 14 Diagram 15

MOUNTING THE CASTERS

DO NOT STRIKE THE WHEELS! Place a piece of wood or something similar that will fit between the wheels and gently tap with a hammer.

DIAGRAM 15

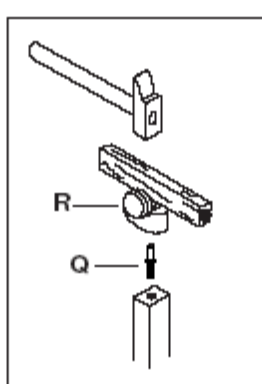

IMPORTANT NOTE: On models with removable bun feet (**U**), screw on bun foot (**U**) first. Then, if you wish to use castors, when are optional, follow step 12 (See diagram 13).

